

Table Of Contents

CHAPTER 1.....	1
INTRODUCTION	1
ABOUT THIS MANUAL	1
FEATURES AND CAPABILITIES.....	4
EVOLUTION DX2 FEATURES AND SPECIFICATIONS.....	4
HARDWARE FEATURES	4
SCHEDULING CAPABILITIES	5
PROGRAM SETUP OPTIONS	6
MAINTENANCE AND ALARM DIAGNOSTIC CAPABILITIES	6
MISCELLANEOUS FEATURES.....	8
ELECTRICAL SPECIFICATIONS.....	9
CHAPTER 2.....	9
SYSTEM BASICS	9
EVOLUTION DX2 CONTROLLER FRONT PANEL	9
EVOLUTION DX2 CONTROLLER FRONT PANEL	10
BASE SCREEN	12
MAIN MENU	14
USING THE CONTROLLER KEYS	15
<i>"Beep" Responses.....</i>	<i>17</i>
<i>System Configuration.....</i>	<i>17</i>
<i>Keyboard Main Panel.....</i>	<i>17</i>
<i>Main Power Switch Box.....</i>	<i>18</i>
<i>Master Valve/Pump/Power Board.....</i>	<i>18</i>
<i>Station Output Board.....</i>	<i>18</i>
<i>Communication Board (optional).....</i>	<i>19</i>
<i>Sensor Terminal Board (optional).....</i>	<i>19</i>
<i>DX2 Pedestal Controller Assembly Layout.....</i>	<i>20</i>
CHAPTER 3.....	23
GETTING STARTED.....	23
INITIALIZATION PROCEDURE	23
MASTER VALVE/PUMP PROGRAM DEFAULT OPTIONS.....	25
TO CREATE A PROGRAM, THE FOLLOWING PARAMETERS MUST BE SET:	28
CHAPTER 4.....	35

SETUP35

- SYSTEM DEFAULTS35
- SYSTEM DEFAULTS36
- PROGRAM41
 - Program Setup Procedure*.....42
- ISC (INDIVIDUAL STATION CONTROL).....50
 - Station Number Procedure*.....51
- STATIONS.....52
- STATIONS SETUP53
 - Limits/Type Procedure*55
 - Main Flow Procedure*61
 - Flow Max Main Line Limits Procedure*.....62
 - Auto Limits Procedure*.....63
- SETUP CONTROLLER67
 - Flow Options Procedure*68
 - Omit By Date Procedure*72
 - User Options Procedure*.....73
 - Configuration Procedure*79
- SENSORS83
 - Moisture Procedure*.....83
 - Flow Procedure*.....84

CHAPTER 5.....89

PROGRAM ENTRY89

- EXAMPLE OF PROGRAM EXECUTION89
- EXAMPLE OF PROGRAM EXECUTION90
- MODIFY PROGRAM92
 - Overview*92
- PROGRAM START TIME PROCEDURE.....93
 - Overview*93
 - Procedure*.....93
- WATERING DAY OPTIONS95
 - Water Days Procedure (14 Day Cycle)*.....95
 - Overview*95
 - Procedure*.....96
- WATER DAYS PROCEDURE (SKIP BY DAY).....98
 - Overview*98
 - Procedure*.....98
- WATER DAYS PROCEDURE (31 DAY CYCLE).....100
 - Overview*100
 - Procedure*.....100

STATIONS	102
<i>Overview</i>	102
<i>Procedure</i>	102
STATION RUN TIME OPTION	103
<i>Programming Individual Stations with Different Run Times</i> ...	103
<i>Procedure</i>	103
QUICK STATION PROGRAMMING OPTION	105
<i>Programming Station Groups with Identical Run Time</i>	105
<i>Procedure</i>	105
PERCENT.....	107
<i>Overview</i>	107
<i>Procedure</i>	107
SEND (APPLIES TO CENTRAL CONTROL SYSTEMS ONLY)	109
<i>Overview</i>	109
<i>Procedure</i>	109
NEW PROGRAM	111
<i>Overview</i>	111
<i>New Program Procedure</i>	112
REVIEW PROGRAM	113
<i>Review Program Procedure</i>	114
CLEAR PROGRAM	116
<i>Clear Program Procedure</i>	116
PROGRAM ON/OFF.....	117
PROGRAM ON/OFF PROCEDURE	118
<i>Stopping a program</i>	118
<i>Starting a Program</i>	119
CHAPTER 6.....	120
INDIVIDUAL STATION CONTROL.....	120
ISC	122
CHAPTER 7.....	123
SYSTEM STATUS	123
COMM STATUS	124
MEASUREMENTS.....	125
<i>Measurements Procedure</i>	126
WATER TOTAL	129
<i>Water Total Procedure</i>	129
REVIEW ALL.....	131
<i>Procedure</i>	131
CHAPTER 8.....	133

MANUAL SYSTEM CONTROL 133

- TEST 134
 - Procedure* 134
- MULTI-STATION 137
 - Procedure* 137
- MULTI-STATION DIAGNOSTICS 142
 - Diagnostic Procedure* 142
- PRESS THE QUIT KEY TO RETURN TO THE BASE MENU 145
- STATION 145
 - Procedure* 145
- RAIN OFF 149
 - Procedure* 149

CHAPTER 9 153

CENTRAL CONTROL 153

- CONTROLLER AS SUBMASTER 154
- TRANSFERRING PROGRAMS BETWEEN THE CENTRAL CONTROL
- COMPUTER AND SUBMASTER/SATELLITE CONTROLLERS 155
 - Upload Procedure* 155
- COMMUNICATIONS AND PROBLEM REPORTING 157
 - Submaster* 157
 - Satellite* 157
 - Diagnostics* 158
 - Controller Logs* 158
 - Weather Center Sensors* 159

CHAPTER 10 161

FIELD MAINTENANCE ACTIVITY AND TROUBLESHOOTING 161

- FLOW MONITORING 161
- BROKEN FIELD WIRING, SHORT CIRCUITS, AND FAULTY VALVE
- SOLENOIDS: 161
- AC POWER INPUT PROBLEMS: 161
- COMMUNICATIONS WIRING ISSUES: 161
- WARNING REPORT (ALARMS) 163
- VIEWING THE WARNING LIST 164
- WARNING DISPLAY LIST 165
 - Standard Warnings* 165
 - Flow Max Warnings* 166
- STANDARD FLOW WARNINGS 167
 - 001 - Station Flow Too Low* 167

002 - Station Flow Too High.....	169
003 - Monthly Water Limit Violation.....	171
004 - Station Electrical Current Too High.....	173
005 - Station Electrical Current Too Low.....	175
006 - Controller Main Line Break Occurred.....	177
007 - Hourly Rain Limit Was Exceeded.....	178
008 - Hardwire Communications Restored (On Line).....	179
009 - Off Line.....	180
010 - Hardwire Communication Failure.....	182
011 - Wind Lower Limit Satisfied.....	184
012 - Wind Upper Limit Exceeded.....	185
013 - Power Failure.....	186
014 - Power Restoration.....	187
015 - Program Upload Request.....	188
016 - Unscheduled Flow.....	189
017 - Daily Rain Limit Reached.....	190
018 - Short Circuit.....	191
FLOW MAX WARNINGS.....	192
019 - Flow Max - Flow Lower Limit Violation.....	192
020 - Flow Max - Flow Upper Limit Violation.....	194
021 - FM - Multiple Flow Sensor 1 Assignment.....	195
022 - FM - Multiple Flow Sensor 2 Assignment.....	196
023 - FM - Multiple Pump Assignment.....	197
024 - FM - Multiple Master Valve.....	199
025 - FM - Multiple Master Valve 2 Assignment.....	200
026 - FM - Multiple Normally Open Master Valves.....	202
027 - Flow Max - Station Advance.....	204
028 - Flow Max - Stop Water.....	205
029 - Auto Limits Aborted.....	206
030 - FM - Communications Failure.....	207
031 - FM - Communications Restored.....	209
032 - Flow Max - Main Flow.....	209
032 - Flow Max - Main Flow.....	210
TROUBLESHOOTING.....	211
Directory of Flow Chart Diagnostic Problems.....	212
Automatic Program Does Not Start.....	213
Flow Sensor Reading Always Zero.....	215
A Station/Valve Does Not Water.....	218
A Station/Valve Does Not Water.....	218
Display is Blank.....	218
Display is Blank.....	219
Display is Blank.....	220
Display is Blank.....	221

<i>Controller Emits a Constant Tone</i>	223
<i>Program Starts - But Does Not Water</i>	224
<i>Monthly Flow Violation Occurred but Program Still Operates</i>	226
<i>Monthly Flow Violation Occurred but Program Still Operates</i>	227
<i>Multiple Stations Do Not Water</i>	228
CONTROLLER STATION OUTPUT BOARD	229
CONTROL DEVICES (RAIN SENSORS, FREEZE SENSORS, ETC.)	231
APPENDIX A	232
FLOW METERS	232
FLOW METER OPERATION OVERVIEW	233
FLOW READING ACCURACY	234
FLOW METER OFFSET AND K VALUES	234
RAIN MASTER FLOW SENSORS	235
SELECTION CHART	235
DATA INDUSTRIAL TEE MOUNTED SENSORS	236
FLOW LIMIT CHECKING	236
STATION UPPER LIMIT	236
STATION LOWER LIMIT	237
MAIN FLOW LIMITS	237
TOTAL MONTHLY FLOW LIMIT	238
UNSCHEDULED FLOW LIMIT	238
ENABLING AND DISABLING FLOW LIMIT CHECKING	239
DELAYING FLOW RATE LIMIT CHECKING	239
LIMIT CHECKING WITH TWO FLOW METERS	241
FLOW METER READING	241
<i>Procedure</i>	241
READING MONTHLY WATER TOTALS	243
<i>Procedure</i>	243
WHEN A FLOW LIMIT VIOLATION IS DETECTED	244
FLOW LIMIT VIOLATION EXAMPLES	245
<i>Overflow in Controller/Main Line Break</i>	245
STATION OVERFLOW	246
STATION UNDER FLOW	246
MONTHLY WATER LIMIT EXCEEDED	246
MULTIPLE STATIONS WITH NON-OVERLAP PROTECTION	247
APPENDIX B	254
CURRENT MONITOR	254
CURRENT MONITOR SETUP	254

CURRENT LIMIT DETECTION.....	255
AUTO LIMITS PROCEDURE.....	256
ENABLING AND DISABLING CURRENT CHECKING	258
<i>Procedure</i>	258
STATION CURRENT LIMIT SETUP.....	259
<i>Current Limit Setup Procedure:</i>	260
EXAMPLE CURRENT LIMIT VIOLATIONS	262
<i>Station Consumes Too Much Current</i>	262
STATION CONSUMES TOO LITTLE CURRENT.....	262
MULTIPLE STATIONS WITH NON-OVERLAP PROTECTION	262
MAXIMUM CONTROLLER CURRENT.....	263
APPENDIX C.....	265
POWER FAILURE/RECOVERY	265
PROBLEM REPORTING.....	265
CANCELING AND CONTINUING WATERING PROGRAMS	266
APPENDIX D.....	269
ACCESS CODES.....	269
ENTERING AN ACCESS CODE	269
<i>Procedure:</i>	269
USING ACCESS CODES.....	272
<i>Gain Access Procedure:</i>	273
APPENDIX E.....	275
FLOW MAX	275
OVERVIEW.....	276
SUBMASTER.....	277
DEVICES	277
FLOW SENSORS.....	278
FLOW CHECK DELAY.....	279
MAIN LINE LIMITS.....	279
FLOW MAX LIMITATIONS	279
PHYSICAL CONFIGURATION	280
FLOW MAX SETUP PROCEDURE.....	285
<i>Overview</i>	285
Submaster:	285
Satellite:	285
SUBMASTER SETUP PROCEDURE.....	286
FLOW MAX MAIN LINE FLOW LIMITS PROCEDURE	292
MAIN FLOW PROCEDURE.....	292

SATELLITE CONTROLLERS 294
 Procedure..... 294
FLOW MAX WORKSHEET 301
FLOW MAX DIAGNOSTIC TOOLS 304
 Real Time Flow Monitor 304
 Procedure..... 304
PRESS THE QUIT KEY TO RETURN TO THE BASE MENU..... 306
REVIEW FLOW MAX PHYSICAL CONFIGURATION 306
 Review All Procedure..... 306
FLOW MAX WARNINGS AND EXCEPTION CONDITIONS 309
FLOW MAX LOWER LIMIT VIOLATION..... 309
FLOW MAX UPPER LIMIT VIOLATION 310
FLOW MAX COMMUNICATIONS FAILURE..... 311
FLOW MAX MAIN FLOW 312
FLOW MAX UNSCHEDULED FLOW 312
APPENDIX F 314
TROUBLESHOOTING BASICS..... 314
 ANALOG MULTIMETERS 315
 VOLTAGE SCALE..... 316
 DIGITAL MULTIMETERS 317
 TROUBLESHOOTING 318
 CABLE CHECKOUT PROCEDURE 318
 POLARITY CHECKOUT PROCEDURE..... 321
 REQUIRED EQUIPMENT 321
 Procedure..... 321
 ALTERNATE POLARITY CHECKOUT PROCEDURE..... 324
 REQUIRED EQUIPMENT 324
 Procedure..... 324
GLOSSARY 328
INDEX 338
RAIN MASTER LIMITED WARRANTY..... 355

Table of Figures

FIGURE 1: EVOLUTION DX2 PEDESTAL ENCLOSURE..... 2
FIGURE 2: EVOLUTION DX2 CONTROLLER FACE PANEL 10
FIGURE 3: BASE SCREEN 12
FIGURE 4: MAIN MENU 14

FIGURE 5: PEDESTAL CONTROLLER ASSEMBLY LAYOUT 20

FIGURE 6: AC POWER SUPPLY WIRING DIAGRAM 21

FIGURE 7: MASTER VALVE AND STATION CONNECTION 22

FIGURE 8: LANGUAGE SELECTION 23

FIGURE 9: YEAR ENTRY 24

FIGURE 10: MONTH ENTRY 24

FIGURE 11: DAY OF THE MONTH ENTRY 24

FIGURE 12: DAY OF THE WEEK ENTRY..... 25

FIGURE 13: TIME OF DAY ENTRY..... 25

FIGURE 14: MASTER VALVE OPTIONS..... 26

FIGURE 15: PUMP OPTIONS 26

FIGURE 16: BASE SCREEN DISPLAY 26

FIGURE 17: PROGRAM ENTRY 42

FIGURE 18: CYCLE MODE 43

FIGURE 19: OVERLAP PROTECTION 43

FIGURE 20: IRRIGATION PROGRAM 44

FIGURE 21: OMIT BY DATE OPTION 45

FIGURE 22: STATION DELAY TIME DISPLAY..... 45

FIGURE 23: TIME FORMAT 46

FIGURE 24: AT WATER LIMIT..... 47

FIGURE 25: MASTER VALVE SELECTION 47

FIGURE 26: PUMP SELECTION..... 48

FIGURE 27: VALVE ON/OFF BETWEEN STATIONS 48

FIGURE 28: VALVE DELAY TURN ON TIME..... 49

FIGURE 29: ISC PROGRAM NUMBER..... 51

FIGURE 30: STATION LIMITS OPTIONS 53

FIGURE 31: FLOW/CURRENT SELECTION 53

FIGURE 32: UPPER LIMIT CHECK 54

FIGURE 33: LOWER LIMIT CHECK 54

FIGURE 34: LIMITS/TYPE 56

FIGURE 35: LIMIT OPTIONS 57

FIGURE 36: MAX CURRENT LIMIT 57

FIGURE 37: MIN CURRENT LIMIT 58

FIGURE 38: MAX FLOW LIMIT..... 58

FIGURE 39: MIN FLOW LIMIT 58

FIGURE 40: STATION TYPE..... 59

FIGURE 41: MAIN FLOW LIMIT ENTRY 62

FIGURE 42: MAIN LIMIT OPTIONS 62

FIGURE 43: MAIN FLOW MAXIMUM LIMIT..... 62

FIGURE 44: AUTO LIMITS 63

FIGURE 45: AUTO LIMITS 64

FIGURE 46: AUTO LIMITS 65

FIGURE 47: CONTROLLER OPTIONS 68
FIGURE 48: LIMIT OPTIONS..... 68
FIGURE 49: MONTHLY WATER LIMIT 69
FIGURE 50: FLOW METER SELECTION..... 70
FIGURE 51: DELAY LIMIT TIME 71
FIGURE 52: UNSCHED FLOW LIMIT 71
FIGURE 53: OMISSION DATES 72
FIGURE 54: MONTH ENTRY 72
FIGURE 55: DAY OF THE MONTH..... 73
FIGURE 56: USER OPTIONS 73
FIGURE 57: TIME FORMAT 74
FIGURE 58: TIME ENTRY FORMAT 74
FIGURE 59: YEAR ENTRY FORMAT 75
FIGURE 60: MONTH ENTRY FORMAT..... 75
FIGURE 61: DATE OF THE MONTH ENTRY 75
FIGURE 62: DATE FORMAT OPTIONS 75
FIGURE 63: DATE FORMAT OPTIONS 76
FIGURE 64: DAY OF WEEK ENTRY FORMAT..... 76
FIGURE 65: USER OPTIONS 76
FIGURE 66: ACCESS CODE 77
FIGURE 67: ACCESS CODE 78
FIGURE 68: ACCESS RESTRICTION 78
FIGURE 69: SELECT ACCESS LEVEL..... 79
FIGURE 70: SELECT ACCESS LEVEL..... 79
FIGURE 71: CONFIGURATION OPTIONS 80
FIGURE 72: SUBMASTER COMMUNICATION 81
FIGURE 73: SUBMASTER ADDRESS 81
FIGURE 74: SHARED DEVICES 82
FIGURE 75: SENSOR OPTIONS..... 83
FIGURE 76: SENSORS SETUP..... 83
FIGURE 77: SENSOR OPTIONS..... 84
FIGURE 78: FLOW METER SELECTION..... 84
FIGURE 79: K VALUE ENTRY 85
FIGURE 80: OFFSET VALUE ENTRY 85
FIGURE 81: PROGRAM 1..... 91
FIGURE 82: MODIFY PROGRAM..... 92
FIGURE 83: START TIME ENTRY 93
FIGURE 84: WATER DAYS OPTIONS..... 96
FIGURE 85: WEEK 1 ENTRY 96
FIGURE 86: SKIP BY DAY ENTRY 98
FIGURE 87: START WATER DAY..... 99
FIGURE 88: 31 DAYS CYCLE ENTRY 100
FIGURE 89: STATIONS 102

FIGURE 90: STATION RUN TIME OPTIONS	103
FIGURE 91: SELECT STATION NUMBER	104
FIGURE 92: STATION RUN TIME ENTRY	104
FIGURE 93: QUICK STATION NUMBER ENTRY	105
FIGURE 94: QUICK STATION TOTAL RUNTIME.....	106
FIGURE 95: PERCENTAGE RUN TIME	107
FIGURE 96: MODIFY PROGRAM.....	109
FIGURE 97: PROGRAM UPLOAD REQUEST.....	109
FIGURE 98: WATER DAY CYCLE OPTIONS.....	112
FIGURE 99: PROGRAM ENTRY	114
FIGURE 100: WEEK 1 WATER DAYS	114
FIGURE 101: PROGRAM CLEAR NUMBER.....	116
FIGURE 102: ISC.....	122
FIGURE 103: SYSTEM STATUS OPTIONS.....	123
FIGURE 104: COMM STATUS	124
FIGURE 105: MEASUREMENTS OPTION.....	126
FIGURE 106: FLOW METER MEASUREMENTS.....	126
FIGURE 107: CURRENT METER MEASUREMENTS	127
FIGURE 108: ET	127
FIGURE 109: RAIN/WIND READINGS.....	128
FIGURE 110: WATER TOTALS	129
FIGURE 111: PAST MONTH WATER TOTALS.....	130
FIGURE 112: REVIEW WATER DAYS	131
FIGURE 113: MANUAL MAIN MENU	133
FIGURE 114: OPERATION TIME.....	134
FIGURE 115: PROGRAM TESTING.....	135
FIGURE 116: MULTI-STATION OPTIONS.....	137
FIGURE 117: STATION ON SEQUENTIALLY	139
FIGURE 118: STATION RUN TIME	140
FIGURE 119: START LATER TIME.....	141
FIGURE 120: WARNING, SHORT CIRCUIT	142
FIGURE 121: MULTI-STATION OPTIONS.....	143
FIGURE 122: RUN TIME ENTRY	143
FIGURE 123: STATION/DEVICE ENTRY	143
FIGURE 124: STATION/DEVICE ENTRY	144
FIGURE 125: STATION NUMBER ENTRY	145
FIGURE 126: STATION OPTIONS.....	146
FIGURE 127: RUN TIME ENTRY	146
FIGURE 128: STATION RUN STATUS	147
FIGURE 129: MANUAL OPERATIONS MENU	148
FIGURE 130: RAIN OFF	149
FIGURE 131: RAIN SHUTDOWN.....	150
FIGURE 132: NO WATER WINDOW TIME	151

FIGURE 133: PROGRAMMABLE RAIN SHUTDOWN 151
FIGURE 134: SATELLITE ADDRESS DISPLAY 154
FIGURE 135: MODIFY PROGRAM 155
FIGURE 136: PROGRAM SEND 156
FIGURE 137: WARNING REPORT 157
FIGURE 138: PROBLEM OFF-LINE..... 157
FIGURE 139: PROBLEM ON-LINE..... 158
FIGURE 140: WEATHER CENTER CONNECTIONS..... 160
FIGURE 141: BASE SCREEN 164
FIGURE 142: WARNING 001 -FLOW LOWER LIMIT 167
FIGURE 143: WARNING 002-FLOW UPPER LIMIT 169
FIGURE 144: WARNING 003-WATER LIMIT 171
FIGURE 145: WARNING 004-CURRENT UPPER LIMIT 173
FIGURE 146: WARNING 005-CURRENT LOW LIMIT 175
FIGURE 147: WARNING 006-MAIN FLOW 177
FIGURE 148: WARNING 007-HOURLY RAIN LIMIT..... 178
FIGURE 149: WARNING 008-ON LINE..... 179
FIGURE 150: WARNING 009-OFF LINE..... 180
FIGURE 151: WARNING 010-HARDWIRE COMMUNICATION FAILURE 182
FIGURE 152: WARNING 011-WIND LOWER LIMIT 184
FIGURE 153: WARNING 012-WIND UPPER LIMIT..... 185
FIGURE 154: WARNING 013-POWER FAILURE 186
FIGURE 155: WARNING 014-POWER ON 187
FIGURE 156: WARNING 015-UPLOAD REQUEST..... 188
FIGURE 157: WARNING 016-UNSCHEDULED LIMIT..... 189
FIGURE 158: WARNING 017-DAILY RAIN LIMIT 190
FIGURE 159: WARNING 018-SHORT CIRCUIT 191
FIGURE 160: WARNING 019-FM FLOW LOW LIMIT 192
FIGURE 161: WARNING 020-FM FLOW UPPER LIMIT..... 194
FIGURE 162: WARNING 021-FM MULTIPLE FLOW METER 1 ASSIGN 195
FIGURE 163: WARNING 022-FM MULTIPLE FLOW METER 2 ASSIGN 196
FIGURE 164: WARNING 023-FM MULTIPLE PUMP 197
FIGURE 165: WARNING 024-FM MULTIPLE MV1 ASSIGNMENT..... 199
FIGURE 166: WARNING 025-FM MULTIPLE MV2 ASSIGNMENT..... 200
FIGURE 167: WARNING 026 -FM MULTIPLE N.O. ASSIGNMENT..... 202
FIGURE 168: WARNING 027-FM STATION ADVANCE 204
FIGURE 169: WARNING 028 -FM STOP WATER..... 205

FIGURE 170: WARNING 029 -AUTO LIMITS	206
FIGURE 171: WARNING 030 -FM HARDWIRE COMM FAILURE	207
FIGURE 172: WARNING 031 -FM COMMUNICATIONS RESTORED	209
FIGURE 173: WARNING 032 -FM MAIN FLOW.....	210
FIGURE 174: OUTPUT BOARD STATION CONNECTIONS.....	229
FIGURE 175: MEASUREMENT OPTIONS.....	241
FIGURE 176: FLOW METER READINGS.....	242
FIGURE 177: STATUS OPTIONS	243
FIGURE 178: WATER TOTAL	243
FIGURE 179: WARNING, MAIN FLOW	245
FIGURE 180: WARNING, UNSCHED LIMIT	245
FIGURE 181: WARNING, FLOW UP LIMIT.....	246
FIGURE 182: WARNING, FLOW LOW LIMIT	246
FIGURE 183: WARNING, WATER LIMIT	246
FIGURE 184: FLOW SENSOR INSTALLATION.....	253
FIGURE 185: AUTO LIMITS	256
FIGURE 186: AUTO LIMITS	257
FIGURE 187: AUTO LIMITS	258
FIGURE 188: CURRENT LIMIT OPTIONS.....	259
FIGURE 189: UPPER LIMIT ENABLE OPTION.....	259
FIGURE 190: LIMIT OPTIONS	260
FIGURE 191: CURRENT LIMIT ENTRY	261
FIGURE 192: WARNING, UP LIMIT.....	262
FIGURE 193: WARNING, LOW LIMIT	262
FIGURE 194: SHORT CIRCUIT WARNING	263
FIGURE 195: FUSE DISPLAY MESSAGE	263
FIGURE 196: ACCESS CODE	269
FIGURE 197: ACCESS CODE OPTIONS	270
FIGURE 198: ACCESS RESTRICTION STATUS	270
FIGURE 199: LEVEL ACCESS SELECTION	271
FIGURE 200: ACCESS DENIED DISPLAY.....	273
FIGURE 201: ACCESS CODE	273
FIGURE 202: ACCESS CODE OPTIONS	274
FIGURE 203: ACCESS RESTRICTION STATUS	274
FIGURE 204: FLOW MAX HARDWIRE CONFIGURATION	281
FIGURE 205: DETAILED HARDWIRE CONNECTIONS	282
FIGURE 206: DETAILED MASTER VALVE AND STATION CONNECTIONS	283
FIGURE 207: SUBMASTER ADDRESS ENTRY	286
FIGURE 208: MASTER VALVE/PUMP SELECTION.....	287
FIGURE 209: FLOW METER 1 CONNECTION	287

FIGURE 210: PUMP CONNECTION.....288
FIGURE 211: MASTER VALVE 1 CONNECTION288
FIGURE 212: MASTER VALVE 2 CONNECTION289
FIGURE 213: NORMALLY OPEN VALVE CONNECTION....289
FIGURE 214: LAST ADDRESS ENTRY290
FIGURE 215: FLOW METER SELECTION.....290
FIGURE 216: K VALUE ENTRY291
FIGURE 217: OFFSET VALUE ENTRY291
FIGURE 218: MAIN FLOW LIMIT ENTRY292
FIGURE 219: MAIN LIMIT OPTIONS.....293
FIGURE 220: MAIN FLOW MAXIMUM LIMIT293
FIGURE 221: UNSCHED FLOW LIMIT294
FIGURE 222: NORMAL MODE295
FIGURE 223: CONTROLLER OPTIONS295
FIGURE 224: FLOW METER CONNECTION.....296
FIGURE 225: FLOW METER CONNECTION.....297
FIGURE 226: MASTER VALVE CONNECTION298
FIGURE 227: AUTO LIMITS.....300
FIGURE 228: CONFIGURATION BLOCK DIAGRAM.....303
FIGURE 229: SUBMASTER REAL TIME REVIEW304
FIGURE 230: SATELLITE REAL TIME REVIEW306
FIGURE 231: PROGRAM PARAMETERS.....306
FIGURE 232: SUBMASTER CONFIGURATION307
FIGURE 233: SATELLITE 001 CONFIGURATION307
FIGURE 234: SATELLITE 002 CONFIGURATION307
FIGURE 235: ANALOG MULTIMETER315
FIGURE 236: CABLE CONTINUITY CHECK.....320
FIGURE 237: POLARITY CHECK.....323
FIGURE 238: +8 VOLT POLARITY CHECK.....326

Table of Tables

TABLE 1: SETUP OPTIONS AND SYSTEM DEFAULTS.....36
TABLE 2: PROGRAM 1 WATERING SCHEDULE90
TABLE 3: CALIBRATION TABLE.....235
TABLE 4: RAIN MASTER K AND OFFSET VALUE248
TABLE 5: ACCESS LEVEL OPTIONS.....272
TABLE 6: FLOW MAX SAMPLE WORKSHEET301