
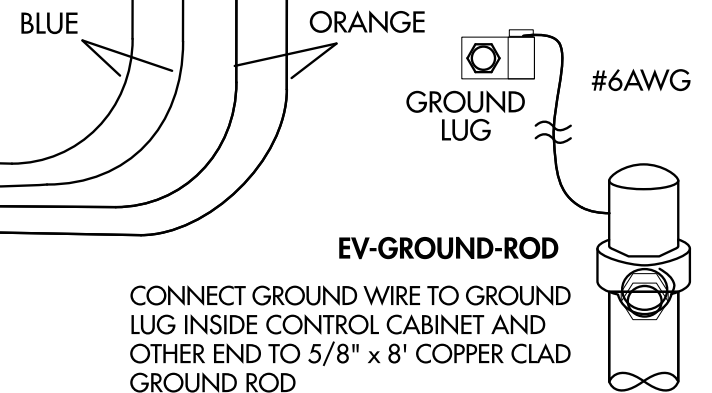
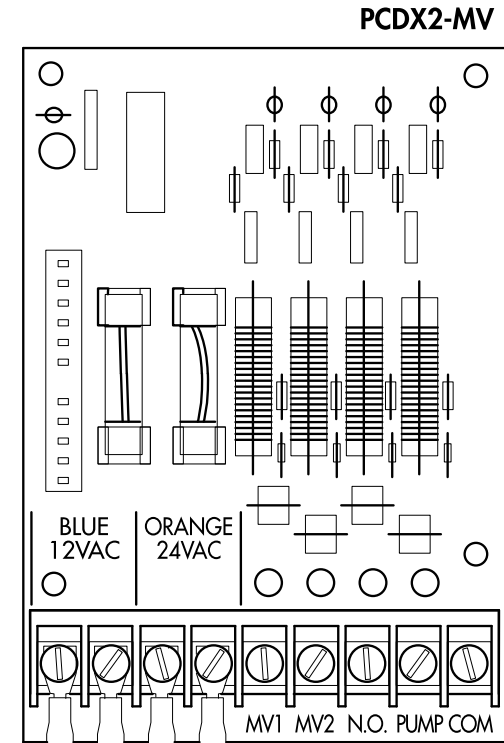
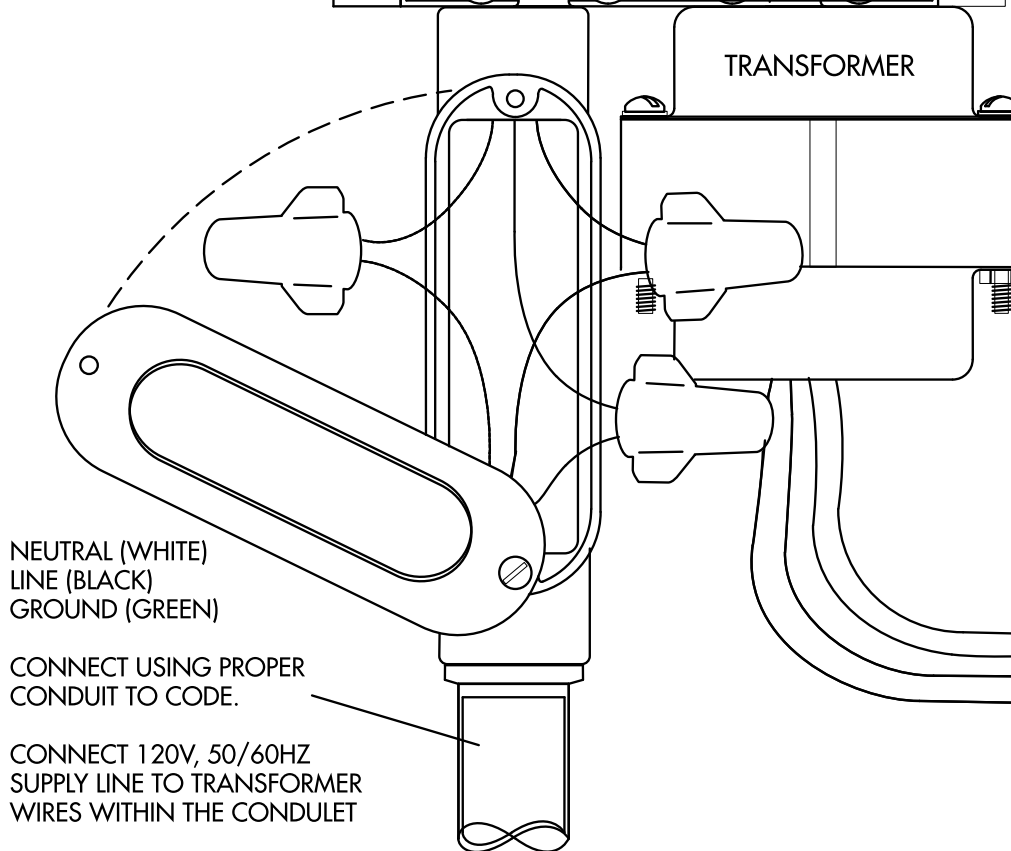
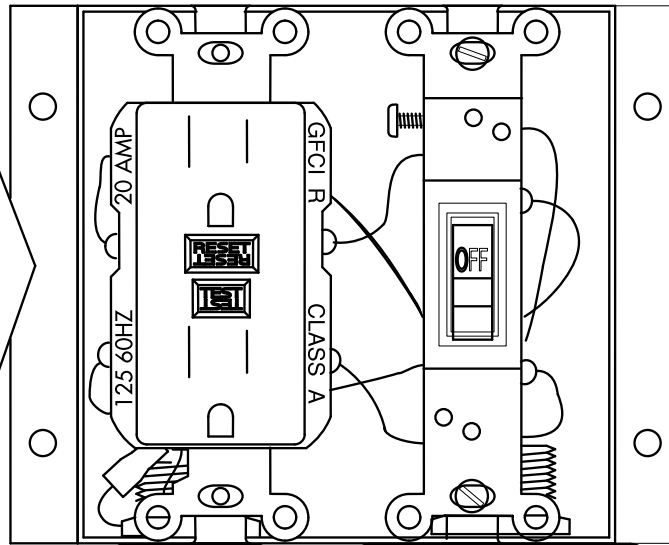


EVOLUTION DX2 • AC WIRING DIAGRAM

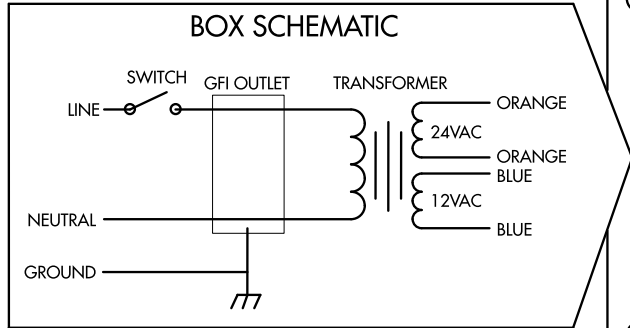

NEUTRAL (WHITE)
LINE (BLACK)
GROUND (GREEN)

CONNECT USING PROPER
CONDUIT TO CODE.

CONNECT 120V, 50/60HZ
SUPPLY LINE TO TRANSFORMER
WIRES WITHIN THE CONDULET